
### PNS

### PRE-ENGINEERED NETWORK SYSTEM

Assembly Instruction Sheet Model PNS-10, and PNS-100

1. Install 4 "Wings" on to outside of panel. These set the proper depth of the PNS panel in a 2 x 4 wall (PNS-100) or a 2 x6 wall (PNS-10)

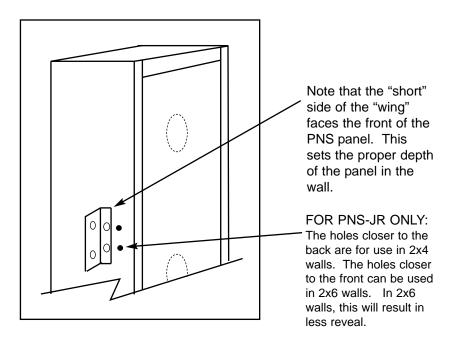

- 2. Knock out appropriate KO's and install grommets
- 3. Mount PNS panel in wall (temporarily) and mark location of holes to be drilled for wire and for AC power.
- Drill holes and permanently install PNS panel using drywall screws.

See "INSTALLER TECH MANUAL" Section 2 for suggestions on wire organization for PNS panel. INSTALLATION INSTRUCTIONS

2925 College Ave Suite A-2 Costa Mesa, Ca 92626

www.eholovision.com

Ph. 714-434-6904 Fax 800-362-0002


## PNS


### PRE-ENGINEERED NETWORK SYSTEM

**Assembly Instruction Sheet** 


Mount Panasonic KSU using pre-drilled holes.


Note that 624 KSU is shown in both the 20" wide and the 14.5" wide panel

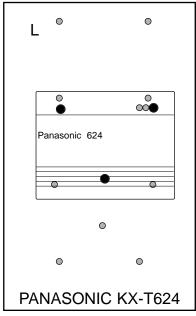

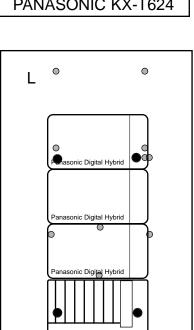

PANASONIC KX-T1232

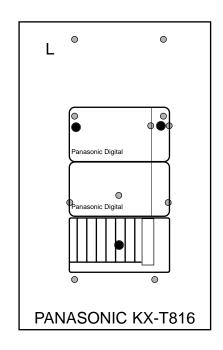

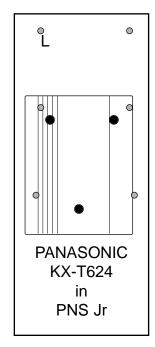

INSTALLATION INSTRUCTIONS

2925 College Ave Suite A-2 Costa Mesa, Ca 92626

www.eholovision.com


Ph. 714-434-6904 Fax 800-362-0002


# PRE-ENGINEERED NETWORK SYSTEM

INSTALLATION INSTRUCTIONS

**Assembly Instruction Sheet** 

### Mount HAI wiring organizer using predrilled holes

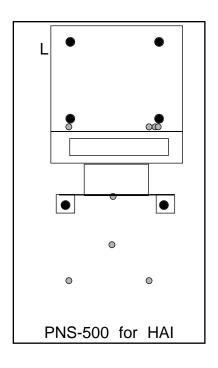

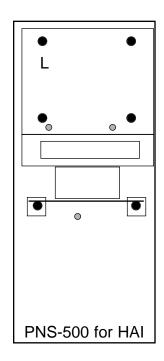

PNS-500 shown in PNS-10

PNS-500 shown in PNS-100

2925 College Ave Suite A-2 Costa Mesa, Ca 92626

www.eholovision.com

Ph. 714-434-6904 Fax 800-362-0002

## PNS

### PRE-ENGINEERED NETWORK SYSTEM

Assembly Instruction Sheet

Install other components in PNS panel

Space for KSU,
modem,
multi-switch,
power
supplies,etc.

PNS-20 or PNS-200

- PNS-20 or PNS-200

PNS-30 or PNS-300

- PNS-40 or PNS-400

INSTALLATION INSTRUCTIONS

2925 College Ave Suite A-2 Costa Mesa, Ca 92626

www.eholovision.com

Ph. 714-434-6904 Fax 800-362-0002